

How to add TRT's New Frequencies to Hybrid Receiver

1. Press "Menu" and go to "Satellite Installation" screen.




2. Go down to "Manual Search" and Press "OK".




3. Press the Yellow button on the remote control to enter the “New” transponder information.




4. Go Down to Frequency line and type “11960” and then to Symbol Rate line and type “22000”. Go to Polarization line and change it to “V” by using right arrow button on the remote control.

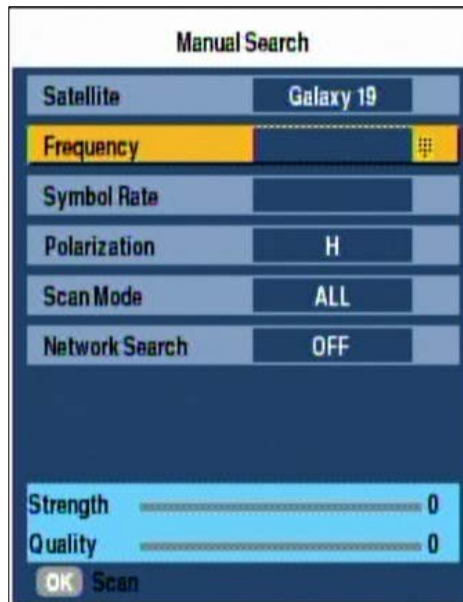

- When you entered the information the green bars will fill up. Press "OK" to scan the channels.

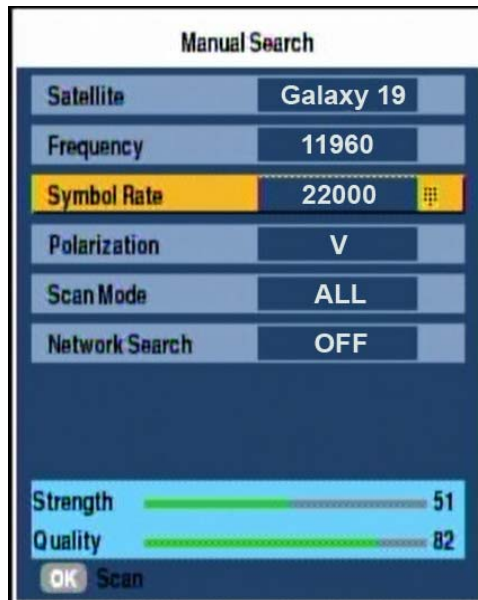

- The system will scan the channels and when it is done it will go back to previous screen. Press "Exit" to get out to the channel list.

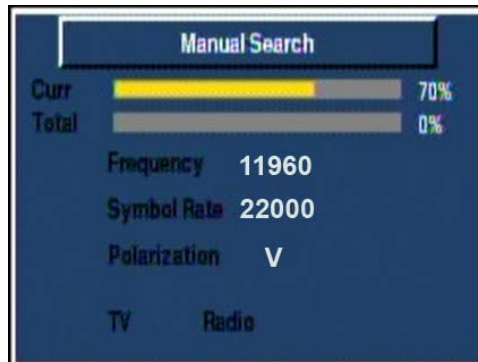

- TRT Channels will appear in different channel numbers. You will need to find the TRT channels in your channel list.